



QUARTER ROUND • BASESHOE • COVE

Install quarter round after the hardwood floor is in place. Quarter round should be fastened to the wall either glued or nailed using finishing nails. If nailed pre-drill the quarter round to avoid splitting.



THRESHOLD • OVERLAP REDUCER OVERLAP NOSING

Install threshold after the hardwood floor is in place. Threshold should be fastened to the subfloor either glued or nailed using finishing nails. If nailed, pre-drill the threshold to avoid splitting.



REDUCER


Install reducer after the hardwood floor is in place. Reducer should be nailed. Face-nail the reducer strip at the edge of the floor. Pre-drill to avoid splitting.



NOSING

Install nosing before installing hardwood flooring. Nosing should be fastened to the subfloor. Pre-drill to avoid splitting and use finishing nails.

The nosing is available with square or round edge

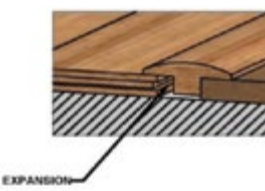

T-MOULDING

Install t-moulding after the hardwood floor is in place. T-moulding should be glued down from one side only in order to let the hardwood flooring expand and contract.

ATTENTION INSTALLER:

It is the installer's responsibility to ensure that flooring accessories complement flooring boards. Wood is a natural material of shades that vary according to cut, grain and mineral streaks. For best results, boards adjacent to accessories should be carefully selected in tones best matching those of the accessory. An installed accessory is considered as accepted.